

EnVivo

User Manual

Wireless Outdoor Speaker Lantern



AFTER SALES SUPPORT



0333 200 5846 1890 917 060



accessionx-uk@teknihall.com

MODEL: 1426 PC: 69216 03/2016

- Wireless Outdoor Speaker Lantern
- Audio Cable
- USB Charging Cable
- User Manual
- Warranty Card

3

YEAR WARRANTY

CONTENTS

INTRODUCTION	4
WELCOME	4
GENERAL INFORMATION AND SAFETY INSTRUCTIONS.....	5
PRODUCT OVERVIEW	6
GETTING STARTED	6
Buttons Function	6
Bluetooth	7
AUX Input.....	7
Powerbank Function	8
Charging the Wireless Outdoor Speaker.....	8
SPECIFICATIONS	8
FAQ	8
DISPOSAL.....	10

AFTER SALES SUPPORT



☎ 0333 200 5846 ☎ 1890 917 060

accessionx-uk@teknihall.com

MODEL: 1426 PC: 69216 03/2016

- Wireless Outdoor Speaker Lantern
- Audio Cable
- USB Charging Cable
- User Manual

3

YEAR WARRANTY

INTRODUCTION

The Wireless Outdoor Speaker Lantern is a 3-in-1 Bluetooth Speaker, LED Lantern and Powerbank and is a suitable companion for the bedside, while camping or for long evenings in the garden with friends and family. With its superior sound quality and cutting edge Bluetooth technology this speaker is a perfect companion for your mobile devices, with easy and simple connection through Bluetooth and 3.5mm AUX-in.

Not only does this speaker allow you to play your favorite music while bathing you in the glow of its calming LED light, but you will also be able to charge your mobile devices with the built in Powerbank function.

The speaker comes in a rugged weatherproof design with a convenient carry handle, and the weatherproof design makes sure that rain won't put an end to your party.

WELCOME

You have made an excellent choice with the purchase of this quality EnVivo brand product. By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of Aldi.

We want you to be completely satisfied with your purchase so this EnVivo product is backed by a comprehensive manufacturer's 3 year warranty and an outstanding after sales service through our dedicated Helpline.

We hope you will enjoy using your purchase for many years to come. If you require technical support or in the unlikely event that the purchase you have made is faulty, please telephone our Helpline for immediate assistance. Faulty product claims made within the 3 year warranty period will be repaired or replaced free of charge provided that you have satisfactory proof of purchase (keep your till receipt safe!) This does not affect your statutory rights. However, be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused or disassembled.

AFTER SALES SUPPORT



☎ 0333 200 5846 ☎ 1890 917 060

accessionx-uk@teknihall.com

- Wireless Outdoor Speaker Lantern
- Audio Cable
- USB Charging Cable
- User Manual

MODEL: 1426 PC: 69216 03/2016



YEAR WARRANTY

GENERAL INFORMATION AND SAFETY INSTRUCTIONS

Read all safety information below and operating instruction before using this Wireless Outdoor Speaker Lantern to avoid any damages to your device.

1. Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects into this device.
2. Do not submerge the Wireless Outdoor Speaker Lantern into liquid.
3. Keep the protection flap closed, otherwise the speaker will not be splash-proof, and water will damage the speaker.
4. Always keep the product out of reach of babies and children, in order to avoid any dangerous situation.

AFTER SALES SUPPORT



☎ 0333 200 5846 ☎ 1890 917 060

accessionx-uk@teknihall.com


MODEL: 1426 PC: 69216 03/2016

- Wireless Outdoor Speaker Lantern
- Audio Cable
- USB Charging Cable
- User Manual

3





 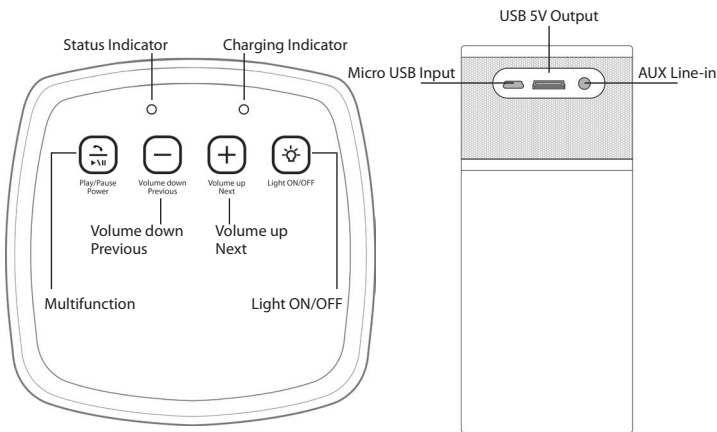




 

YEAR WARRANTY

PRODUCT OVERVIEW



GETTING STARTED

Buttons Function

- The  button: Hold down the  button for 3 seconds to turn on the Wireless Outdoor Speaker. Hold down the  button for 5 seconds to turn off the Wireless Outdoor Speaker again. Click on the  button to Play/Pause music (only during BT connection). When the Wireless Outdoor Speaker is connected to a smartphone and receiving an incoming call, then click on the  button to answer the call, or hold down the  button to reject the call. To end the call click the  button again. Click on the  button twice quickly to redial last called number (this function is only available on some smartphones).
- The  button: Click on the  button to skip to next song during Bluetooth playback. Hold down the  button to turn up the volume.

AFTER SALES SUPPORT



☎ 0333 200 5846 ☎ 1890 917 060







💻 accessionx-uk@teknihall.com

MODEL: 1426 PC: 69216 03/2016

- Wireless Outdoor Speaker Lantern
- Audio Cable
- USB Charging Cable
- User Manual


3

YEAR WARRANTY

- The  button: Click on the  button to play the previous song during Bluetooth playback. Hold down the  button to turn down the volume.
- The  button: Click on the  button to turn the light ON or OFF. Hold down the  button while the light is turned on to adjust the brightness of the light.


Note: Only compatible Smartphones support the redial function.

Bluetooth

1. Hold down the  button for 3 seconds to turn on the Wireless Outdoor Speaker. The Blue indicator light on the Speaker will flash quickly to indicate that it is ready to pair.
2. Turn on for Bluetooth on your smartphone/tablet.
3. Go to the Bluetooth settings on your Smartphone/Tablet and scan for Bluetooth devices.
4. Upon device found (ENV-1426), click the device name and pair with it.
5. After successfully pairing, your speaker will release a prompt tone and the Blue indicator light will be flashing slowly, indicating that your device is connected to the speaker. You will be able to play your favourite music from your smartphone/tablet wirelessly on the Speaker. When receiving an incoming call during music playback, the music will automatically be paused. After the call the music will continue to play again.

Note: If your smartphone requests a pairing code, please enter "0000" and confirm.

AUX Input

Turn on the Wireless Outdoor Speaker. Connect a 3.5 mm audio cable to the AUX input port on the Speaker, and the other end to the audio device. When a 3.5 mm audio cable is connected to the speaker, it is not possible to play music through Bluetooth. Click on the  button to mute/unmute the sound.

Note: It is only possible to Play/Pause/Skip tracks through Bluetooth connection, and not 3.5 mm audio connection.

AFTER SALES SUPPORT



☎ 0333 200 5846 ☎ 1890 917 060



accessionx-uk@teknihall.com

MODEL: 1426 PC: 69216 03/2016

- Wireless Outdoor Speaker Lantern
- Audio Cable
- USB Charging Cable
- User Manual

3

YEAR WARRANTY

Powerbank Function

Connect the USB cable that came with your mobile device to the USB port on the Wireless Outdoor Speaker, and the other end to your mobile device. The Green LED indicator light will now turn on indicating that it is charging your mobile device.

Charging the Wireless Outdoor Speaker

Connect the Micro USB charging cable to a computer or USB charger and the Wireless Outdoor Speaker. The red LED indicator will be flashing while charging. When the Speaker is fully charged the red LED indicator light will stop flashing and remain on steadily.

SPECIFICATIONS

- Bluetooth V2.1 + EDR
- Bluetooth name: ENV-1426
- Aux-input
- Transmission distance up to 10M
- Speaker output: 5W
- Built-in light
- Built-in rechargeable battery - 4400mAh
- Powerbank function
- USB output: 5V/1A
- Weatherproof: IPX4

FAQ

1. *My smartphone cannot find any new Bluetooth devices?*
 - a) Make sure the Wireless Outdoor Speaker has entered pairing mode.
 - b) Ensure the Wireless Outdoor Speaker is within the effective working range.
2. *Bluetooth devices cannot pair up*
 - a) Make sure your Smartphone supports a new connection and has not reached the maximum connection allowance. Please refer to your Smartphone user manual if required.

AFTER SALES SUPPORT



☎ 0333 200 5846 ☎ 1890 917 060

accessionx-uk@teknihall.com

- Wireless Outdoor Speaker Lantern
- Audio Cable
- USB Charging Cable
- User Manual

MODEL: 1426 PC: 69216 03/2016



- b) Make sure the pairing password entered is "0000". If you are using a Bluetooth transmitter device, please ensure the responding password of your Bluetooth transmitter supports "0000" code.
3. *My Wireless Outdoor Speaker does not play music/answer call when it is connected to my Bluetooth smartphone?*
- a) Make sure your Bluetooth smartphone supports A2DP and HSF (handsfree) profile.
- b) Ensure your Bluetooth smartphone is within effective working range.
- c) Make sure you have not connected a 3.5 mm Audio cable to the Speaker.
4. *When paired with my computer, windows ask for new driver? Can you supply?*
- a) We cannot supply. The bluetooth A2DP/HSF drivers may be required to play sound via bluetooth connection. A driver is needed for the Bluetooth module on your PC, to connect to the Wireless Outdoor Speaker. Different bluetooth module may require different drivers. Please contact your PC or bluetooth module's manufacturer for driver update.
5. *Why can I not remotely control the pause, play, previous song and skip track functions with the Wireless Outdoor Speaker when playing music?*
- a) When you are using 3.5 mm AUX audio in connection, you cannot pause, change volume or skip tracks with the buttons on the speaker.
- b) This feature needs the Bluetooth devices paired with the speaker to support AVRCP (Audio/Video Remote Control Profile). Please make sure your smartphone or other Bluetooth device supports AVRCP.
6. *Why does the Speaker not play any music when I have connected the 3.5 mm audio cable to it?*
- a) Make sure that the Speaker is turned on.
- b) Click on the Power/Play button to make sure that the speaker is not muted.

AFTER SALES SUPPORT



© 0333 200 5846 © 1890 917 060

accessionx-uk@teknihall.com

MODEL: 1426 PC: 69216 03/2016

• Wireless Outdoor
Speaker Lantern
• Audio Cable
• USB Charging Cable
• User Manual

3

YEAR WARRANTY

DISPOSAL



Batteries, electrical and electronic equipment (EEE) contain materials, parts and substances, which can be dangerous to the environment and harmful to human health if waste of electrical and electronic equipment (WEEE) are not disposed of correctly.

Batteries, electrical and electronic equipment, which are marked with the WEEE logo (as shown on the left), should not be thrown away with your household waste. Contact your Local Authority Waste Disposal Department, as they will be able to provide details of the recycling options available in your area.

AFTER SALES SUPPORT



☎ 0333 200 5846 ☎ 1890 917 060



accessionx-uk@teknihall.com

MODEL: 1426 PC: 69216 03/2016

- Wireless Outdoor Speaker Lantern
- Audio Cable
- USB Charging Cable
- User Manual

3

YEAR WARRANTY

EnVivo

WARRANTY CARD

WIRELESS OUTDOOR SPEAKER LANTERN - 69216

PLEASE KEEP YOUR PURCHASE RECEIPT TOGETHER WITH YOUR CARD.

NAME _____

ADDRESS _____



DATE OF PURCHASE _____

LOCATION OF PURCHASE _____

Detailed description of malfunction

Accession ApS - Vandmanden 34 - DK - 9200 Aalborg SV
www.accessionx.com
accessionx-uk@teknihall.com

AFTER SALES SUPPORT



☎ 0333 200 5846 ☎ 1890 917 060

accessionx-uk@teknihall.com

MODEL: 1426 PC: 69216 03/2016

- Wireless Outdoor Speaker Lantern
- Audio Cable
- USB Charging Cable
- User Manual

3

YEAR WARRANTY