

EnVivo

Manual

World Band Radio



Contents

Welcome	5
What is included in the box?.....	6
Cautions/warnings.....	6
Parts name	8
Care and Maintenance	8
Operation.....	10
Installing the batteries	10
Attention.....	11
Use external power.....	11
Power Switch	11
Search Station	12
Setting the Clock.....	12
Setting the Alarm	13
Alarm Function	14
Other Functions	15
Tone Switch.....	15



0844 8005 893



1890 917 060

accessionx-uk@teknihall.com



Radio Frequency Scales	15
Troubleshooting	16
Disposal.....	19
Warranty card	20



UK

0844 8005 893

IRE

1890 917 060

accessionx-uk@teknihall.com



Welcome

You have made an excellent choice with the purchase of this quality EnVivo brand product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of Aldi.

We want you to be completely satisfied with your purchase so this EnVivo product is backed by a comprehensive manufacturer's 3 year warranty and an out-



UK

0844 8005 893

IRE

1890 917 060

accessionx-uk@teknihall.com



standing after sales service through our dedicated Helpline.

We hope you will enjoy using your purchase for many years to come.

What is included in the box?

1. Instruction Manual with Warranty information
2. World Band Radio

Cautions/warnings

- Read and understand all warnings on the World Band



UK

0844 8005 893

IRE

1890 917 060

accessionx-uk@teknihall.com



Radio and in this user manual.

- Do not expose the World Band Radio to water, rain or excessive moisture
- Do not place inflammable, explosive or hazardous objects near the World Band Radio
- Do not disassemble or try to repair the World Band Radio yourself; you might get injured or damage the radio
- Do not operate the World Band Radio if it is damaged
- Do not throw or shake the World Band Radio



UK

0844 8005 893

IRE


1890 917 060

accessionx-uk@teknihall.com



- Keep away from corrosive materials or chemicals

Parts name

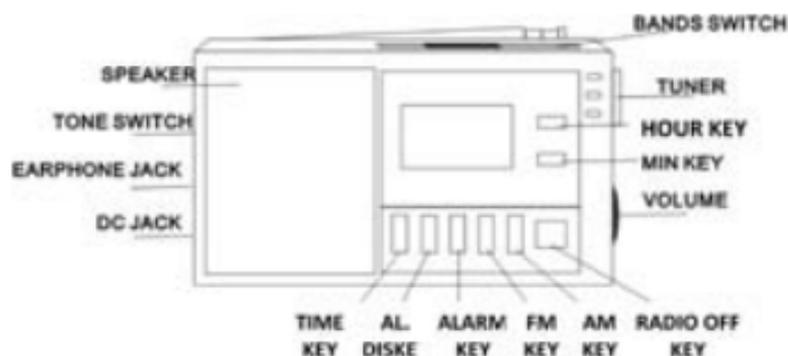

FM/MW/SW I -7 High Sensitivity
 Digital Display
 Radio with Alarm Clock

Care and Maintenance

- Avoid knocking/dropping the radio



(UK)

0844 8005 893

(IRE)

1890 917 060

accessionx-uk@teknihall.com



- Do not use or store the radio in hot or cold places
- Keep magnetic tape, magnetic card and other magnetic software away from the speaker
- Do not use new and old batteries together
- Remove the batteries to avoid leakage when the radio is not used for a long time
- Do not adjust the components in the radio
- Clean the radio with a dry and soft cloth



0844 8005 893



1890 917 060


accessionx-uk@teknihall.com



Operation

Installing the batteries

The radio uses 2 x 1.5V batteries (not included). Please insert the new batteries in the battery slot according to the polarity.

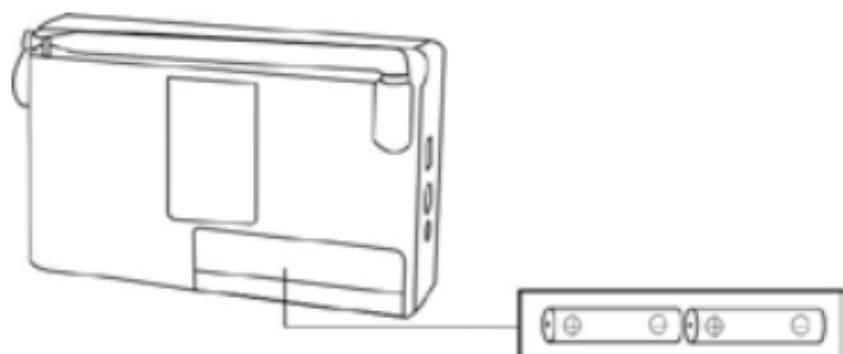

If the sound or volume is faint, please replace with new batteries.



UK

0844 8005 893

IRE

1890 917 060

accessionx-uk@teknihall.com



Attention

Do not use new and old batteries together. In order to prevent the leakage of electrolysis liquid or danger of explosion do not charge or heat the batteries.

Use external power

Please use output DC3V 300mA regulating external direct current power. Check the positive and negative of the plug.

Power Switch

Press the AM FM KEY to turn on the radio. Move the band switch to select MW/ SW1-7 station



UK

0844 8005 893

IRE

1890 917 060

accessionx-uk@teknihall.com



programs. Press the FM KEY to select FM Station programs.

Search Station

After the band is selected, turn the TUNER and watch the station frequency on the LCD to search for your desired station program.

Setting the Clock

1. After having installed the batteries, in time mode, "12:00" will appear on the LCD.
2. Press and hold the TIME KEY. Simultaneously, press the HOUR KEY to adjust



0844 8005 893



1890 917 060

accessionx-uk@teknihall.com



hour, or press the MIN KEY to adjust minute.

3. 12 hours system is used for this radio.

Setting the Alarm

After setting the clock correctly, you can set the alarm time. In TIME MODE keep pressing the ALARM KEY until the alarm time (which is set previously) displays on the LCD. Press the HOUR KEY to adjust hour and press the MIN KEY to adjust minute.



UK

0844 8005 893

IRE

1890 917 060

accessionx-uk@teknihall.com



Alarm Function

Keep the radio in TIME MODE after setting the alarm time.

Turn on the Alarm Function by pressing the ALARM KEY once, and a symbol appears on the display. When the Alarm Function is on, the radio will automatically play accordingly to the set alarm time.

Turn off the Alarm Function by pressing the ALARM KEY once, and the symbol disappears from the screen.



0844 8005 893



1890 917 060

accessionx-uk@teknihall.com



Other Functions

Tone Switch

The Tone Switch is set in the radio.
You can select different tones
HI/LOW.

Radio Frequency Scales

MW	530	- 1605	KHz
FM	87	- 108	MHz
SW1	5.80	- 6.30	MHz
SW2	7.09	- 7.67	MHz
SW3	9.41	- 10.13	MHz
SW4	11.83	- 12.36	MHz
SW5	13.60	- 13.80	MHz
SW6	15.10	- 15.60	MHz
SW7	17.50	- 17.90	MHz



0844 8005 893



1890 917 060

accessionx-uk@teknihall.com



Troubleshooting

Problem: Why does it sometimes sound like the radio station is jammed?

Solution: The MW and SW frequencies are strongly jammed by TV sets, fluorescent lamps, silicon controlled table lamps, computers, motors etc. When using the radio please keep a certain distance from the mentioned electrical equipments.

Problem: Why is the reception not always good inside?

Solution: Reinforced bar structures inside multi-storied



0844 8005 893



1890 917 060

accessionx-uk@teknihall.com



buildings and high buildings will affect the broadcast signal. Stand near a window to improve the reception effect.

Problem: How can the reception be improved for a specific radio station?

Solution: The SW and FM broadcast will be strongly jammed by a nearby station signal. Adjust the antenna and angle of the radio will improve the reception effect.

Problem: Why does the display sometimes deviate?

Solution: The digit display radio is affected by the temperature,



0844 8005 893



1890 917 060

accessionx-uk@teknihall.com



humidity and vibration etc. The digit frequency may deviate. When searching automatically, and the frequency deviates please adjust to receive the correct station.

Problem: Does the radio work at low temperature?

Solution: When the temperature is under -10°C , it will cause leakage of the LCD. In general please avoid using the radio in low temperature.



UK

0844 8005 893

IRE

1890 917 060

accessionx-uk@teknihall.com



Disposal



Batteries, electrical and electronic equipment (EEE) contains materials, parts and substances, which can be dangerous to the environment and harmful to human health if waste of electrical and electronic equipment (WEEE) is not disposed of correctly. Batteries, electrical and electronic equipment, which is marked with the WEEE logo (as shown on the left), should not be thrown away with your household waste. Contact your Local Authority Waste Disposal Department, as they will be able to provide details of the recycling options available in your area.



Battery safety:

Do not burn. Risk of explosion.
Do not recharge non-recharge-able batteries.
If swallowed seek immediately medical advice.
Ensure correct polarity.
If not used for extended period remove battery.



UK

0844 8005 893

IRE

1890 917 060

accessionx-uk@teknihall.com

3

YEAR
WARRANTY

EnVivo

Warranty card

World Band Radio 50780

Please keep your purchase receipt together with your warranty card

Name _____

Address _____



Date of purchase _____

Location of purchase _____

Detailed description of malfunction

Accession ApS, Nibevej 54.1, DK-9200 Aalborg SV.
www.accessionx.com



UK

0844 8005 893

IRE

1890 917 060

accessionx-uk@teknihall.com

3
YEAR
WARRANTY

20